

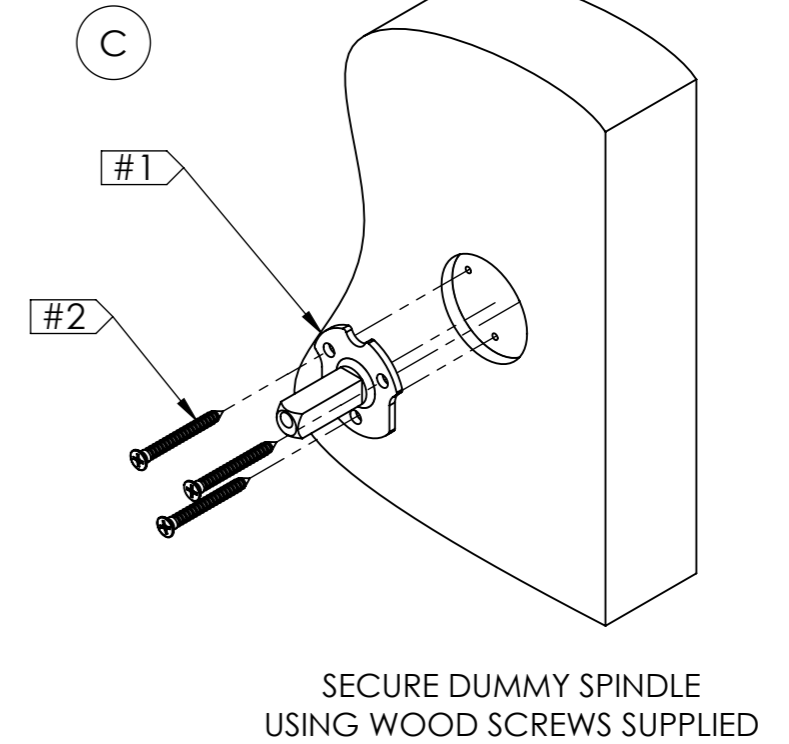


IMDK-003 - SATURN & BANDED EGG DOOR KNOB - FITTING INSTRUCTIONS

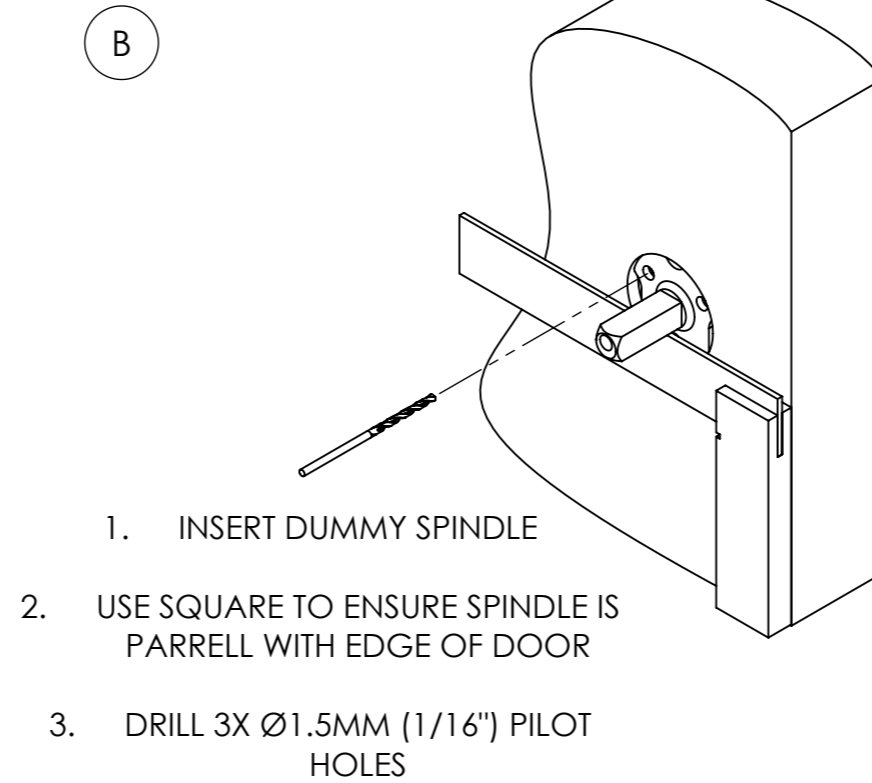

FIXED DEAD - SINGLE/PAIR

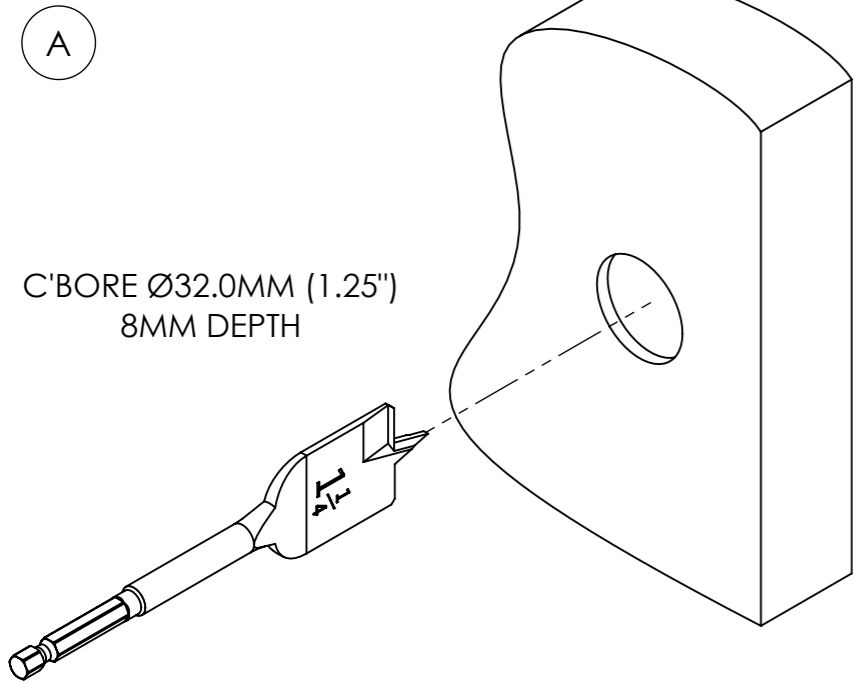

NOTE
ROSE FIXINGS ARE OFFSET AT 12°
DRILL PILOT HOLES AT SPECIFIED ANGLE PRIOR TO FITTING
DO NOT DRILL HOLES SQUARE TO DOOR FACE


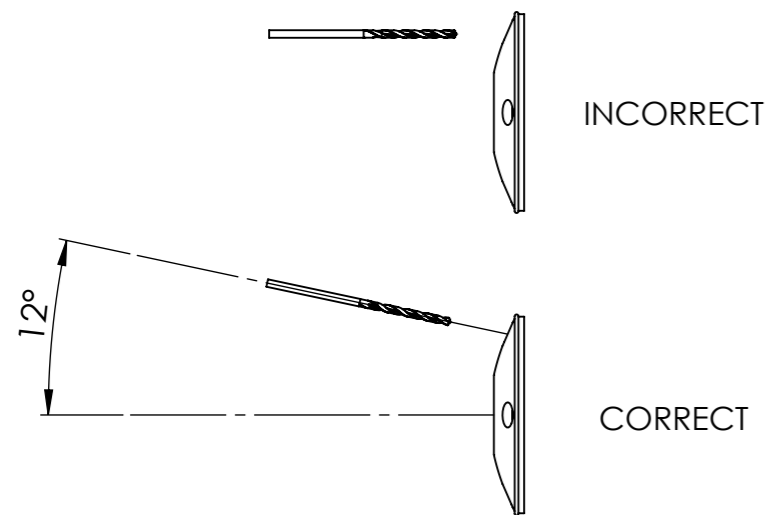


FIG. A



FIXING KIT

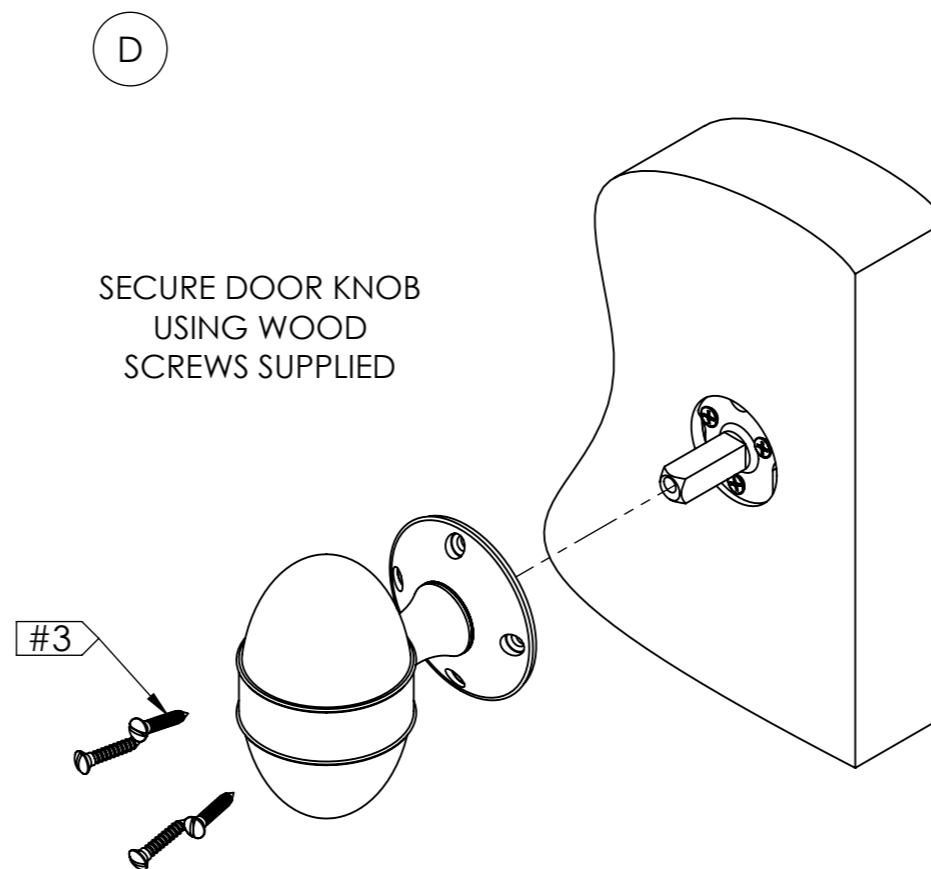